

B&W 320 MTBH 30 – Stocks in Huge Numbers

| <u>ITEM NAME</u> | <u>PART NO.</u> |
|---------------------------------|-------------------------------|
| ROLLER GUIDE | B5A, POS.14,16-18 |
| ROLLER GUIDE | B5A, POS.19-21-23 |
| PUSHER COMPLETE | B5A, POS. 8-31-33-36-37 |
| ROCKER INLET VALVE | B5A, POS. 1,2,7,42,43 |
| ROCKER EXHAUST VALVE | B5A, POS. 1,2,6,7,43 |
| THRUST SCREW | B5A, POS. 1,2 |
| BY-PASS VALVE COMPLETE | E3A, POS.16, POS. 9-11, 13-16 |
| GUIDE ROLLER | B-104A, NR.11, POS. 10, 12-16 |
| LOWER MAIN BEARING SHELL | A1A, POS.6 |
| UPPER RUBBER RING | A9A |
| LOWER RUBBER RING | A9A |
| PISTON | A11B, POS. 4-5 |
| OIL-SCRAPER RING | A11B |
| PISTON RING | A11B |
| UPPER CONNECTING BEARING SHELL | A11B, POS.9 |
| SPRAYER | C6A |
| FUEL PUMP ASSEMBLED | E1A |
| BIG END BEARING, UPPER PART | A11B, POS.8 |
| BIG END BEARING, LOWER PART | A11B, POS.9 |
| ROCKER ARM BUSH | B5A, POS.42 |
| MAIN BEARING SHELL LOWER PART | A1A, POS.6 |
| RUBBER RING TOP | A9A, POS.12 |
| RUBBER RING BOTTOM | A9A, POS.13 |
| NOZZLE FOR FUEL INJECTION VALVE | C6A, POS.17 |
| FUEL PUMP COMPLETE | E1A, POS.19 |
| INJECTOR COMPLETE | C6A, POS.21 |
| SPINDLE GUIDE | C6A, POS.19 |
| SPINDLE | C6A, POS.20 |
| PLUNGER | E1A, POS.11 |
| DELIVERY VALVE | E1A, POS.16 |